


BTR 001 SCREW

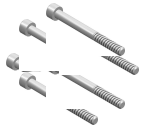

BTR 002 SPRING RING



BTR 003 WASHER



BTR 004 FLANGE




BTR 006 DRIVE BELT



BTR 005 Center Bolt



BTR 008 DRIVE GEAR

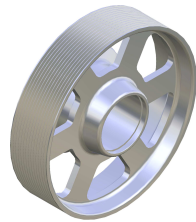

BTR 007 BALL BEARING



BTR 007 BALL BEARING



BTR 009 SPACER



BTR 010 LOCK RING bore



BTR 011 LOCK RING shaft



BTR 012 ECCENTRIC SHAFT



BTR 013 MOUNTING BRACKET



BTR 015 SCREW



BTR 014 SCREW



BTR 017 SCREW



BTR 016 LOCK RING shaft

