


Cooling fan - installation




fan

new rope starter collars

- 1) If your engine is equipped with a rope starter please remove it – if not, please proceed with step 2

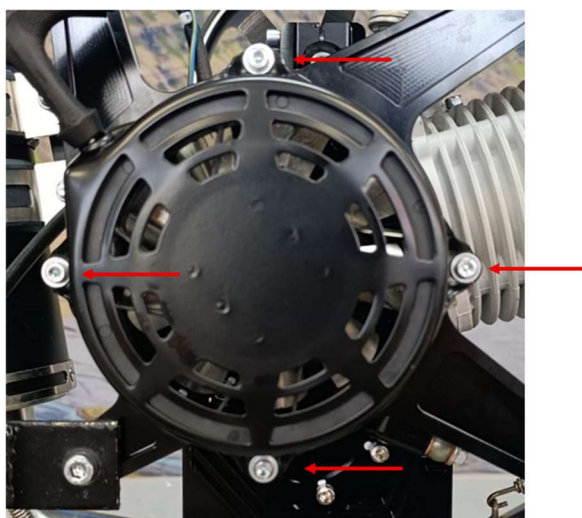


- 2) Remove the starter rotor

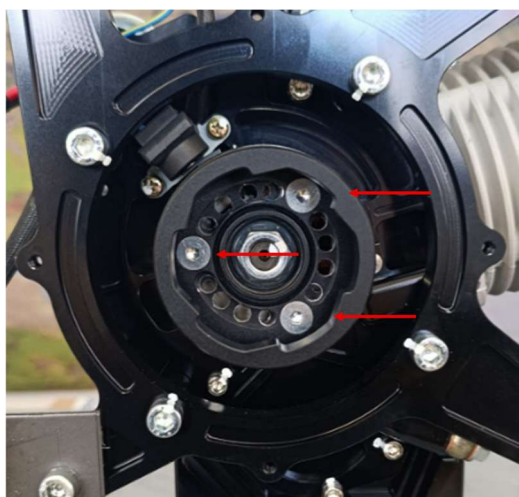


Cooling fan - installation



- 3) Put on the fan

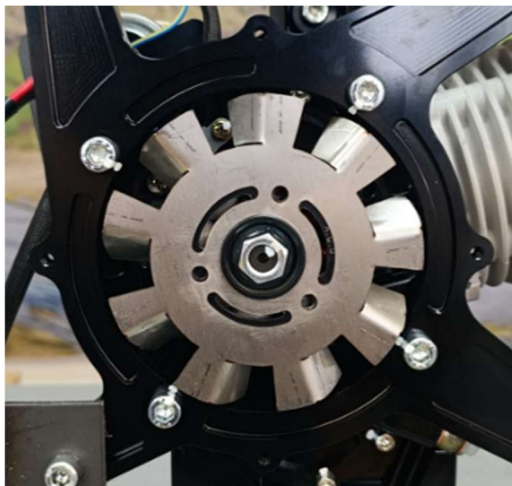

- 4) Reinstall the starter rotor – 3 screws M6, use blue Loctite, torque 12Nm

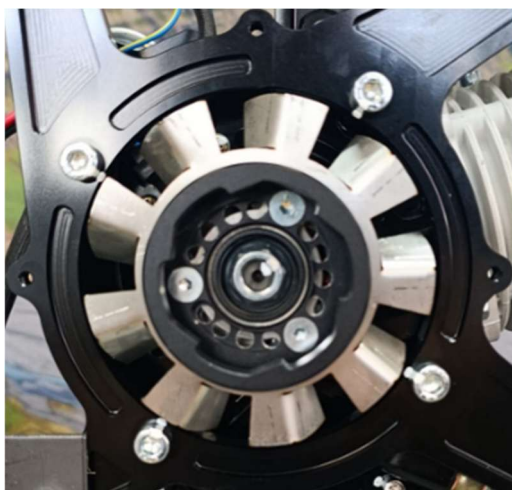

- 5) Reinstall the rope starter (if engine is equipped with it) with the new rope starter collars – 4 screws M5, use blue Loctite, torque 8 Nm

