

New Engine Ventilation System



Provided parts

1.



Insert the reduction into the ventilation tube

2.



Use a standard hammer to fix it

3.



Reduction tube fully installed



Install the Steel wool in the separator, this will drain the oil from the contaminated air