


Installation pickup (new ACG)

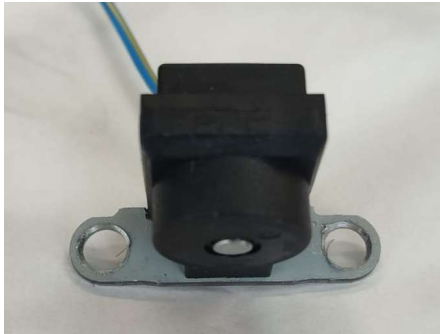

To avoid issues with the ignition timing, please follow this procedure precisely:



The predrilled holes in the pickup are bigger than the screws – this makes it possible to adjust the final position on the ACG.



When installing the new ACG, position the pickup as far as possible in the direction of rotation (to the right).



Adjust the clearance between the pickup and the flywheel trigger point to exactly 0.5 mm.