EASY-STARTER
Installation instructions



Parts:

1 - recoil starter

2 - screw M6 – 3 pcs

3 - starter adapter

4 - screw M5 – 4 pcs

5 - washer M5 – 4 pcs


6 - spacer – 4 pcs




1 – apply blue Loctite to the short screws (part no. 2)



2 – put the starter adapter (part no. 3) on the engine

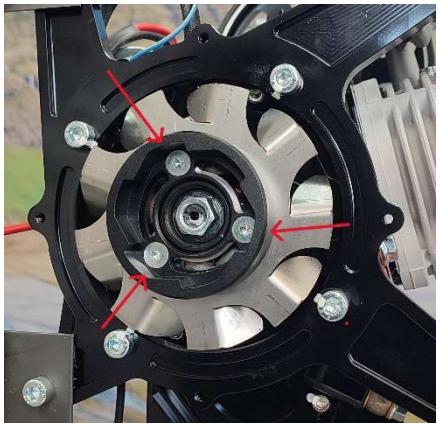


3 – secure the starter adapter with the three small screws, tighten to a torque of 10 Nm

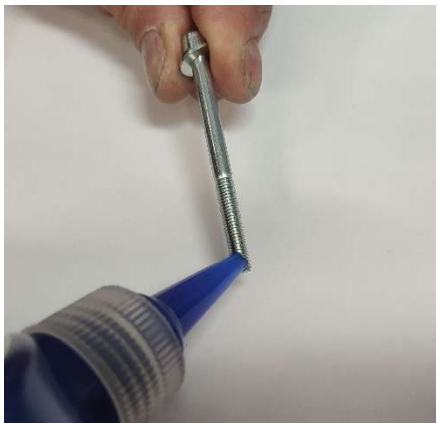

4 - fit the washers (part no. 5) onto the screws (part no. 4) and apply blue Loctite



5 – fit the screws onto the recoil starter (part no. 1)

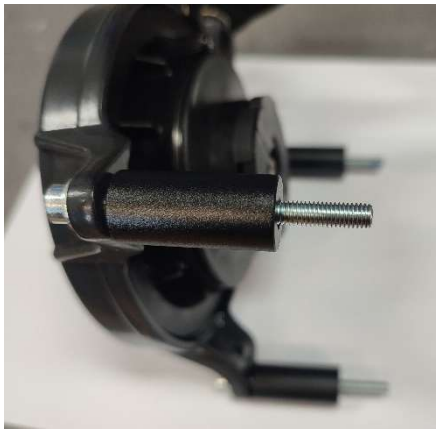

6 – add the spacers (part no. 6)



7 – secure the recoil starter with the four screws, tighten to a torque of 9 Nm