


Oil-cooler-system MY2026

Installation instructions

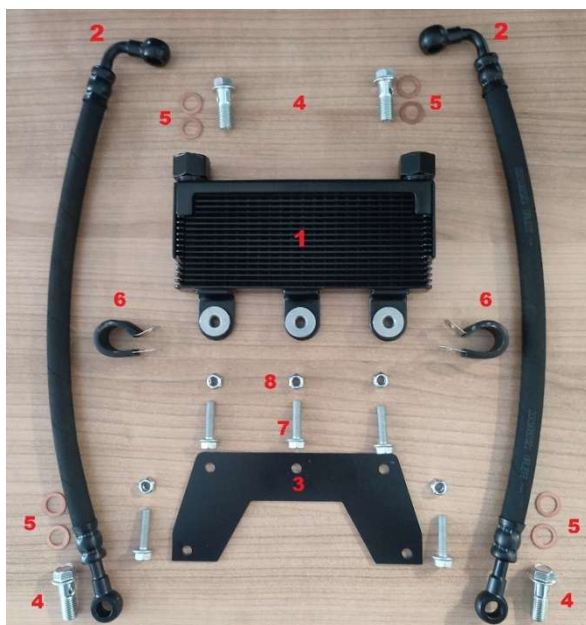

Parts:

- 1 oil cooler
- 2 oil hose – 2 pcs
- 3 mounting bracket
- 4 hose bolt – 4 pcs
- 5 copper washer – 8 pcs
- 6 clamp – 2 pcs
- 7 screw – 5 pcs
- 8 nut – 5 pcs



- 1) Remove the oil bypass line



- 2) Attach the oil hoses to the oil cooler — use red Loctite, torque 25 Nm





- 3) Install the oil cooler to the mounting frame
Tighten to 12 Nm



Result



- 4) Install the oil hoses




Turn the engine to the other side

Fix the left hose to the upper connection and right hose to the lower one.



Please use red Loctite, tighten to 25Nm

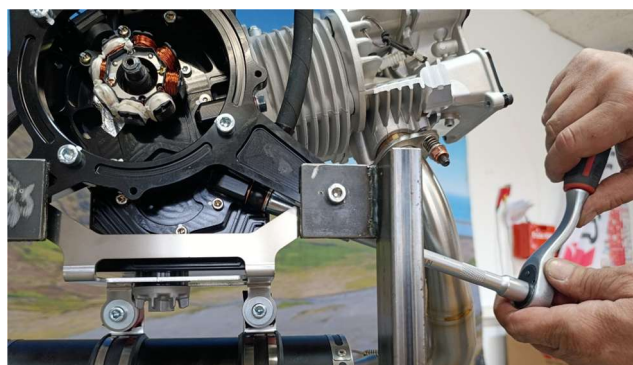

When using the engine with the oil cooler, add approximately 80 ml of oil in addition to the standard 450 ml. Make sure the oil level is kept between the midpoint (minimum) and the upper (maximum) marks on the oil sight glass. To check the oil level, start the engine and let it run for 30 seconds. Then switch it off and verify the oil level as described above.